

# PRECAUTION MANUAL

# MOISTER

## PRECAUTION

### ● SAFETY INSTRUCTIONS

**Do not use it with other substances, and keep away from hot surfaces, heat, sparks, flames and other sources of ignition in handling.** In addition, it may cause severe eye irritation and have sleepiness or dizziness and allergic skin reactions. Also, the intentional misuse through vapor inhalation can be fatal, so you should never try it.





### ● FIRST AID :

**If In Eyes :** Immediately flush the eye with plenty of fresh water for at least 15 minutes and seek medical attention.

**If On Skin :** Wash the contaminated area off with water and soap.


**If Swallowed :** Do not induce vomiting and seek medical attention immediately.

**If Inhaled :** Breathe in fresh air, and, if abnormal symptoms persist, seek medical attention.

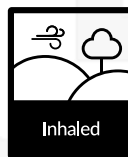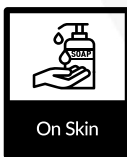

### ● WARNING !

Keep it away from children and pets. Storage it indoor space of 60°F~90°F(15°C~32°C) without direct sunlight. Should never be frozen.

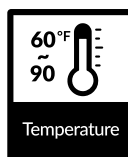

- Check there is no heat on the surface before sprayed.
- If the sprayed solution gets on the applied PPF, immediately wipe it off with water.


# INSTALLATION

## ● DILUTION & PROPORTION

Depending on the properties of the film adhesive, water or glycerin (liquid soap) is mixed and used.


### A. Normal

: + Water 20% mixed

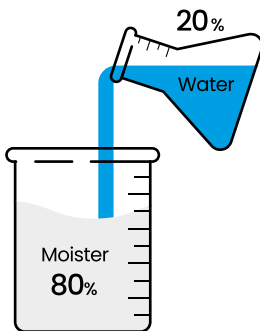


### B. Feel the film's adhesion is strong

: Water 20% & Soap 1~2pump mixed

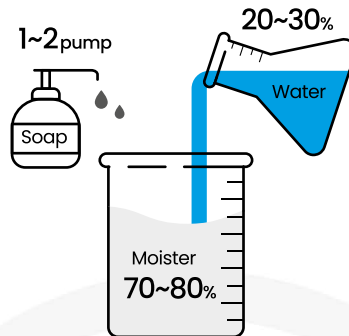

### C. Feel the film's adhesion is weak

: + IPA 10~20% mixed

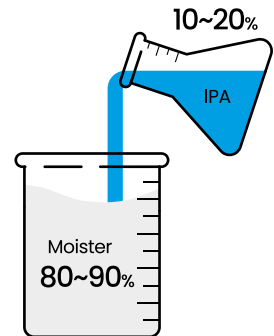

## ● WORK ENVIRONMENT

Indoor space larger than 150 ~300 sq. ft.(5~10sq.m) depending on the product and spread method.

- A place with no direct sunlight and the internal temperature of about 77°F (25°C)
- A well-ventilated place
- A place without dust

Be sure to wear protective equipment (protective goggles, protective gloves and a mask) in the above places.

## ● SHELF LIFE

Please meet strict expiration dates to maximize product efficiency.

- 2 years in the original sealed packaging
- 6 months after opening

